

Gas cooler series EGK 1SD

In the chemical industry, petrochemistry or biochemistry, reliable process control relies on prompt and exact determination of the operating parameters.

Here, gas analysis is key for safe and efficient control of process flows, environmental protection and quality assurance. This benefits controlling flue gas emission in power stations or exhaust gas analysis in automotive engineering, as well as the efficient control of air separators or sterile production and packaging in the food industry.

Many of the analysis processes used in these fields require extracting the sample gas. This inevitably also extracts process-related contamination such as particles or moisture. These in turn can impact the measurement results or damage the measuring cells. The sample gas must therefore be conditioned before entering the analyser.

The EGK 1SD is a medium duty compressor sample gas cooler. It can be wall-mounted or used as a table-top cooler with up to two gas paths.

Compact installation

One or two gas paths

Heat exchanger made from stainless steel, Duran glass or PVDF

Bühler constant control system

Self-monitoring

Cooling block temperature display

Status alarm

Rated cooling power 303 btu/h

Dew point stability ± 0.2 °F

CFC-free

FM approved




EGK 1SD

Performance data 350 btu/h 300 ٨ 250 - TS,DTS 200 Cooling capacity (Btu/h) - · TG,DTG 150 - - TV 100 - DTV 50 0 70 40 50 60 80 90 100 110 °F 120 Ambient temperature (°F)

Remark: The limit curves for the heat exchangers exchanger apply to a dew point of 149 °F.

Technical Data

Gas Cooler Technical Data			
Operational readiness:	after max. 15 minutes		
Rated cooling capacity (at 77 °F):	303 Btu/h		
Ambient temperature:	41 °F to 122 °F		
Gas output dew temperature preset:	41 °F		
Dew point fluctuations static: in the entire specification range:	0.1 К ± 1.5 К		
Protection class:	IP 20		
Housing:	Stainless steel		
Weight incl. heat exchanger:	approx. 33 lb		
Electric supply:	115 V, 60 Hz or 230 V, 50 Hz Plug per DIN 43650		
Electrical data:		230 V	115 V
	Typical power input:	140 VA	155 VA
	Max. operating current:	1.6 A	3.2 A
Alarm output switching connection:	250 V, 2 A, 50 VA Plug per DIN 43650		
Packaging dimensions:	approx. 16.5 in x 17.3 in x 13.8 in		
FM approval no.:	3040918		

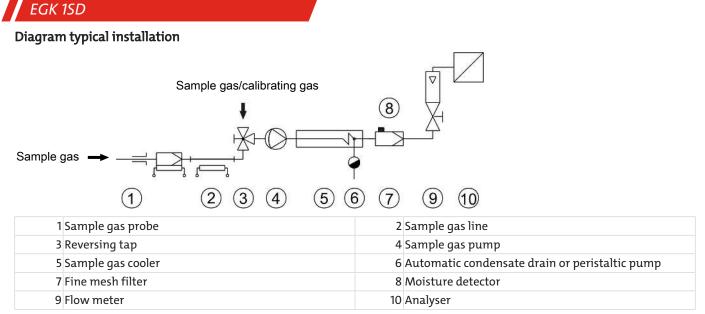

See data sheets for individual component models and data.

Heat exchanger description

The energy content of the sample gas and the required cooling capacity of the gas cooler is determined by three parameters: gas temperature ϑ_G , dew point T_e (moisture content) and volume flow v. The outlet dew point rises with increasing energy content of the gas. The approved energy load by the gas is therefore determined by the tolerated rise in the dew point.

The following limits are specified for a normal standard operating point of $\tau_e = 149$ °F and $\vartheta_G = 194$ °F. The maximum volume flow v_{max} in lpm of cooled air is indicated, so after moisture has condensed.

If the values fall below τ_e and ϑ_G , the flow v_{max} may be increased. For example, on the heat TG heat exchanger, the parameter triple $\tau_e = 122$ °F, $\vartheta_G = 176$ °F and v = 4.7 lpm can also be used in place of $\tau_e = 149$ °F, $\vartheta_G = 194$ °F and v = 6.3 lpm.

Please contact our experts for clarification or refer to our design program.

Heat exchanger overview


Heat exchanger	TS TS-I ²⁾	TG TG	TV-SS TV-SS-I ²⁾	DTS (DTS-6 ³⁾) DTS-I (DTS-6-I ³⁾) ²⁾	DTG DTG	DTV ³⁾ DTV-I ^{2) 3)}
Version / Material	Stainless steel	Glass	PVDF	Stainless steel	Glass	PVDF
Flow rate v _{max} ¹⁾	8.9 lpm	4.7 lpm	2.6 lpm	2 x 4.2 lpm	2 x 2.3 lpm	2 x 2 lpm
Inlet dew point T _{e,max} ¹⁾	175 °F	175 °F	149 °F	175 °F	149 °F	149 °F
Gas inlet temperature $\vartheta_{G,max}$ 1)	356 °F	284 °F	284 °F	356 °F	284 °F	284 °F
Max. Cooling capacity Q _{max}	427 Btu/h	218 Btu/h	114 Btu/h	427 Btu/h	218 Btu/h	175 Btu/h
Gas pressure p _{max}	2321 PSI	44 PSI	44 PSI	363 PSI	44 PSI	29 PSI
Pressure drop ∆p (v=2.5 lpm)	.12 PSI	.12 PSI	.12 PSI	.1 PSI each	.1 PSI each	.22 PSI each
Dead volume V _{tot}	4.2 cu. in.	2.9 cu. in.	7.9 cu. in.	1.7 / 1.5 cu. in.	1.7 / 1.5 cu. in.	1.3 / 1.3 cu. in.
Gas connections (metric)	G1/4	GL 14 (6 mm) ⁴⁾	DN 4/6	6 mm tube	GL14 (6 mm) ⁴⁾	DN 4/6
Gas connections (US)	NPT 1/4"	GL 14 (1/4") ⁴⁾	1/4"-1/6"	1/4" tube	GL14 (1/4") ⁴⁾	1/4"-1/6"
Condensate out connections (metric)	G3/8	GL 25 (12 mm) ⁴⁾	G3/8	Tube 10 mm (6 mm)	GL18 (10 mm) 4)	DN 5/8
Condensate out connections (US)	NPT 3/8"	GL 25 (1/2") ⁴⁾	NPT 3/8"	Tube 3/8" (1/4")	GL18 (3/8") 4)	3/16"-5/16"

¹⁾ Max. cooling capacity of the cooler must be considered

²⁾ Models marked I have NPT threads or US tubes, respectively.

³⁾ Condensate drain only possible with condensate pump

⁴⁾ Gasket inside diameter

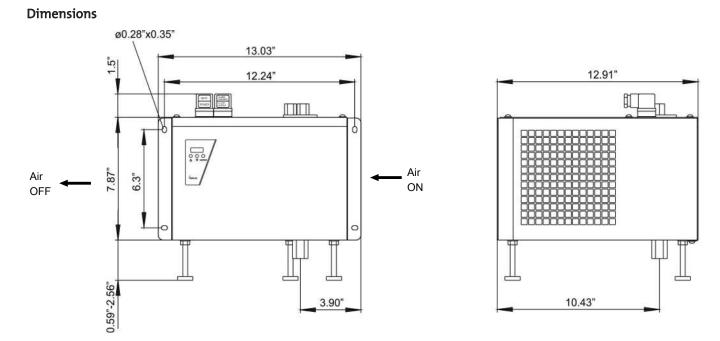

Ordering instructions

EGK 1SD

The item number is a code for the configuration of your unit. Please use the following model key:

Please note: Every individual gas path must be equipped with peristaltic pump or condensate drain.

4561	Х	Х	Х	Х	0	0	0	0	Product Characteristics
				Voltage					
	1	1					115 V metric screw connections		
	2								230 V metric screw connections
	3								115 V US screw connections
	4								230 V US screw connections
									Gas path / Material / Version
		0	0	0					without heat exchanger
		1	1	0					1 gas path / single stainless steel heat exchanger / (TS or TS-I)
		1	2	0					1 gas path / single glass heat exchanger / (TG)
		1	3	0					1 gas path / single PVDF heat exchanger / (TV-SS or TV-I)
		2	6	0					2 gas paths / dual stainless steel heat exchanger / (DTS or DTS-I)
		2	6	1					2 gas paths / dual stainless steel heat exchanger / (DTS-6 or DTS-6-I) $^{1)}$
		2	7	0					2 gas paths / dual glass heat exchanger / (DTG)
		2	8	0					2 gas paths / dual PVDF heat exchanger / (DTV or DTV-I) ¹⁾
						Condensate drain ²⁾			
					0	0	0	0	

¹⁾ Condensate outlets only suitable for connecting peristaltic pumps.

²⁾ Peristaltic pumps available for separate installation.

Spare parts and accessories

ltem no.	Description
44 10 00 1	Automatic condensate drain 11 LD V 38
44 10 00 4	Automatic condensate drain AK 20, PVDF
44 10 00 5	Condensate trap GL 1; glass, 0.4 L
44 10 01 9	Condensate trap GL 2; glass, 1 L
see data sheet 450020	Peristaltic Pump CPsingle, CPdouble